



[Replacement Chinrest paper]



NOTE

Please use the chinrest paper that provided by Huvitz Co.,Ltd.

9.4.3 Replacing Fuse

- ① Turn off and raise the Non-Contact Tonometer HNT-1/1P with two arm carefully.
- ② Remove the Power cord
- ③ Pick the fuse holder out from the Power inlet
- ④ Exchange the fuses
- ⑤ Insert the fuse folder

9.5. Cleaning

To protect infection and contamination, equipment must be kept clean at all times.



CAUTION

Do not use the solvents such as strongly volatile substance, thinner, benzene, etc

Do not use a sponge or cloth soaked in water because the water might leak into the equipment.

Clean headrest rubber and chinrest with an alcohol before sending device to authorized agent or Huvitz for maintenance.

1. Pachy window and glass part of air nozzle

- ① Check the pachy window and glass part of air nozzle from an oblique direction for any contamination such as dust or soil.
- ② Remove dust on the surface of pachy window or glass part of air nozzle with wind-blower and a dry and soft cloth.
- ③ For sever stains, Wipe with a clean cloth such a gauze dampened with an alcohol

2. Operator contact parts(Power switch, LCD, Covers, Joystick, Print cover, Chin rest, Safety button)

- ① Power switch
 - A. Wipe with a dry and soft cloth.
- ② LCD, Covers, Joystick, Print cover, Chin rest, and Safety button
 - A. When dirty or stained things on surface, wipe with a dry and soft cloth
 - B. For sever stains, Wipe with a clean cloth such a gauze dampened with neutral detergent or alcohol.

3. Patient contact parts (Chinrest paper and headrest rubber)

- ① Always clean the patient contact parts (such as chin rest paper and headrest rubber) before measuring each patient.
- ② Remove a single sheet of chinrest paper if the chinrest paper is used.
- ③ Before or after the measurement, wipe the headrest rubber with a soft cloth or gauze with an alcohol.